



PREMIUM ROLL BARS & WIND DEFLECTORS

BMW Z3 Roadster Roll Bars & Wind Deflector



INSTALLATION INSTRUCTIONS

Expert Fitment Required
Montage durch Fachwerkstatt erforderlich
Montaje sólo por el concesionario
Montage par spécialiste nécessaire
E' necessario in officina specializzata
Especialista em montagem requerido
Montage door vakman nodig
Montage ved professionelt værksted påkrævet
Nødvendig med montering fra fagvejværksted
Verkstadsmontage erfordras
Asennus tarpeen merkkikorjaamossa
Montáž ve specializované dílně nutná
A szereléshez szakműhely kell
Konieczny montaż przez warsztat specjalistyczny
Να τοποθετεί από συνεργείο

What's in the box:



Chrom Bars Part No: WTP00B09



Wind Deflector Part No: 05.31.01.01



Black Bars Part No: WTP00B21



PLEASE NOTE

Once you have installed the roadster bars you no longer have access to the centre storage compartment.

STEP 1

Open the top and fold both seats forward. Remove the round cover that sits above the seatbelt.




STEP 2

If there is plastic insulation material inside this needs to be removed. If there not material inside continue to **STEP 4**.



STEP 3

Remove the plastic cover of the seatbelt by removing all screws that hold. Remove the insulation.

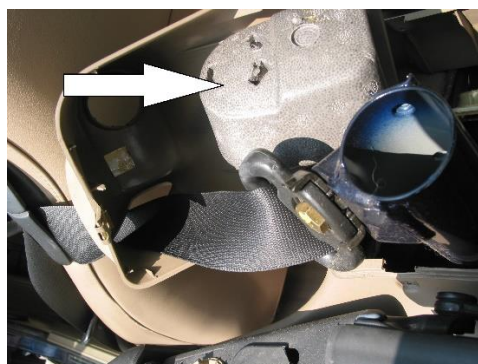



STEP 4

Reinstall the covers and enlarge the holes in the cover preferably with a Dremel Multi Tool but a sharp knife will do as well. The hole needs to be large enough for a tight fit of the roadster bar brackets.




STEP 5

Install both brackets by tightening the bolt on top of the bracket with a 13mm wrench. This way the bracket will expand and fixate in the tube that is present in the car. Make sure position of the holes in the brackets line up with holes in the bar.



STEP 6

Install the bar to the brackets using a 5mm Allen key.

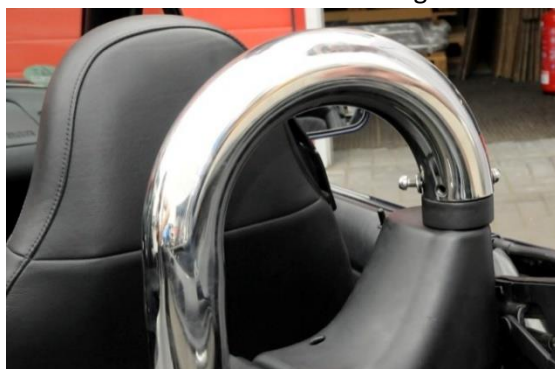



PREMIUM ROLL BARS & WIND DEFLECTORS

INSTALLATION INSTRUCTIONS

STEP 7

Install the wind deflector to the bars using the supplied bolts. Tighten the bolt with a 10mm wrench and install the plastic cap to cover the bolt.



PLEASE NOTE

These bars have been TÜV approved but they have not been crash tested and are not a safety device.



TÜV SÜD Automotive GmbH
Gottlieb-Daimler-Straße 7
D-70794 Filderstadt



Automotive

Nr.: 003
Hersteller: Cabrio Supply
Typ: Roadster Bügel

Seite 1 von 1

Gutachterliche Stellungnahme

Betreff: Roadster Bügel (Cabrio)

Antragsteller: Cabrio Supply
Radeweg 25
NL – 8171MD Vaassen
Niederland

Aufgabe:

Die Anbringung eines Roadster Bügel mittels Bolzen hinter dem Sitzen von Kraftfahrzeugen ist zu beurteilen.

Beispiel:



Beurteilung:

Diese Fahrzeugteile sind einem Dachgepäckträger gleichzusetzen.

Gemäß Beispielkatalog zum §19 StVZO erlischt die Betriebserlaubnis eines Fahrzeug nicht durch die Anbringung eines Dachträgers (siehe Punkt 6.12 des Beispielkatalogs) weil keine Genehmigung und / oder Teilegutachten erforderlich ist.

Dies gilt für Dachgepäckträger die die Vorschriften des § 30c StVZO erfüllen.

AM-HZBW; Filderstadt, den 26. 05. 2009,



Dipl.- Ing.(FH) Schwarz

Akkreditiert unter DAR-Registriernummer KBA-P-000001-95
von der Akkreditierungsstelle des Kraftfahr-Bundesamtes, Bundesrepublik Deutschland