



PREMIUM AFTERMARKET WIND DEFLECTORS



INSTALLATION INSTRUCTIONS

Porsche 911 993 Wind Deflector 1993-1998

Product No.: 29.05.01.01

What's in the box

- 1 x wind deflector
- 1 x installation manual
- 2 x wind deflector plugs
- 1 x bracket





STEP 1

Open the top and fold the seats forward. Take out the plastic caps on both side of the car.



STEP 2

Drill a hole in the center of both plastic caps.



STEP 3


Fit the supplied plugs to the plastic caps.



--	--	--

STEP 4


Shorten the plug and place the caps back into the car.

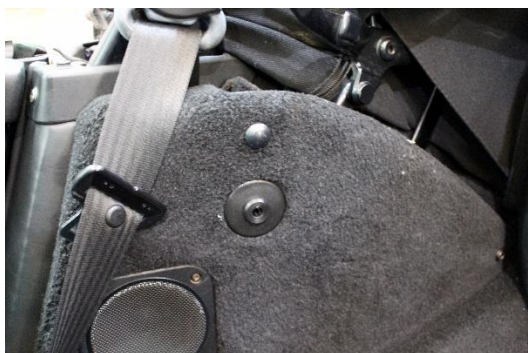



STEP 5

Fold both rear seats forward and attach the supplied brackets to the rear of the seat using two self-tapping screws (not supplied). To determine exact position for click the wind deflector into the car and make sure the wind deflector is horizontal.

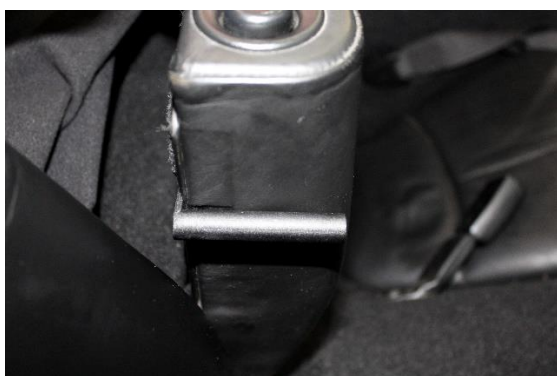

**STEP 5**

Click the wind deflector into all brackets and go out for a test drive and enjoy your wind deflector!

