



## PREMIUM AFTERMARKET WIND DEFLECTORS

## INSTALLATION INSTRUCTIONS

Porsche 911 993 US MODEL Wind Deflector 1993-1998

Product No.: 29.05.02.01

### What's in the box

- 1 x wind deflector
- 1 x installation manual
- 2 x wind deflector plugs





### STEP 1

Open the top. Take out the plastic caps on both side of the car.



### STEP 2

Drill a hole in the center of both plastic caps.






### STEP 3

Fit the supplied plugs to the plastic caps.



### STEP 4

Shorten the plug and place the caps back into the car.

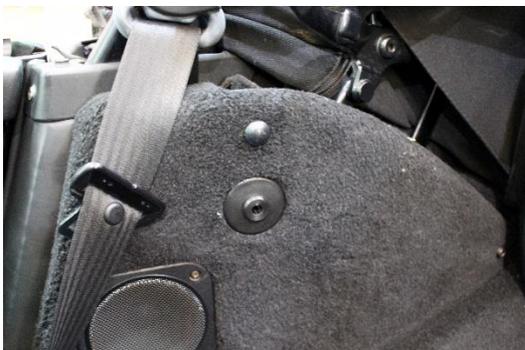



### STEP 5

Click the wind deflector into all brackets and go out for a test drive and enjoy your wind deflector!

