



## PREMIUM AFTERMARKET WIND DEFLECTORS

## INSTALLATION INSTRUCTIONS

### Ford Mustang 1 Series 4 Wind Deflector 1971-1973

Product No.: 13.07.01.01

#### What's in the box

- 1 x wind deflector
- 1 x installation manual
- 4 x wind deflector plugs (left & right).



#### ATTENTION

Drilling is **always** required.

#### Tools required:

- M16 wrench
- M12 drill


#### Parts supplied:


- 1 x wind deflector
- 1 x manual
- 4 x wind deflector plugs M12



### STEP 1

Open the top and fold the seats forward. Hold the wind deflector in the car and mark the position of the side pins on your side panel. Drill a 12mm hole on the marked position. The side panels are made of cardboard so there not much force needed.

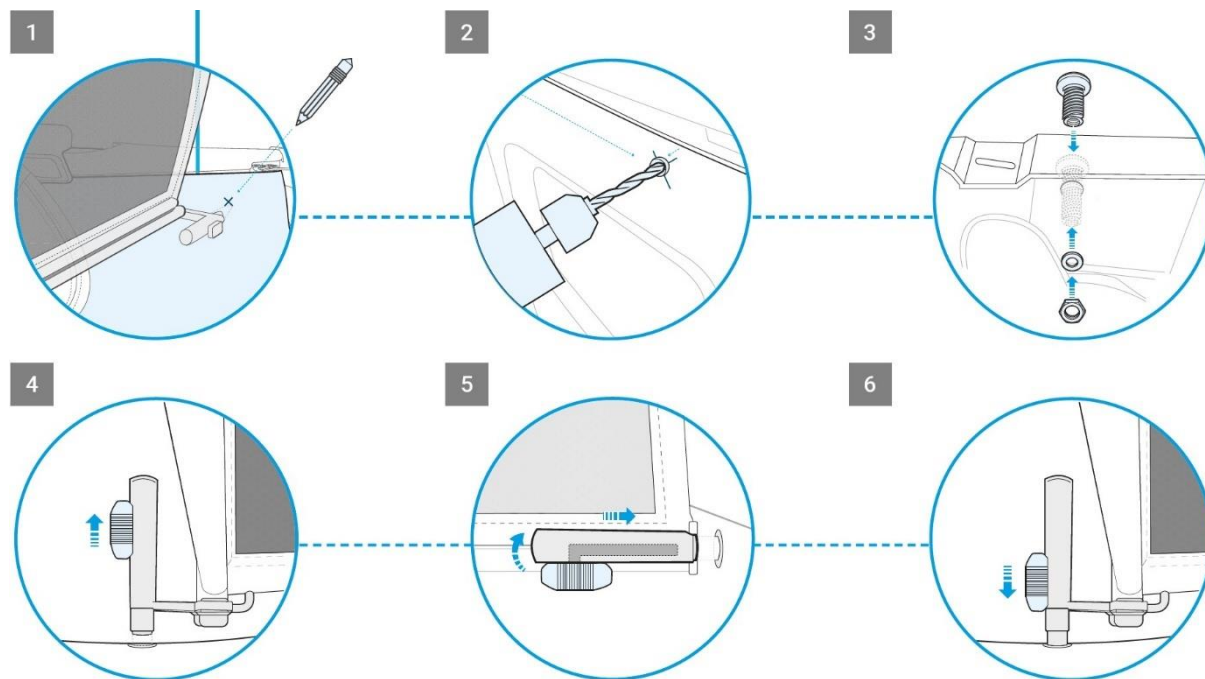


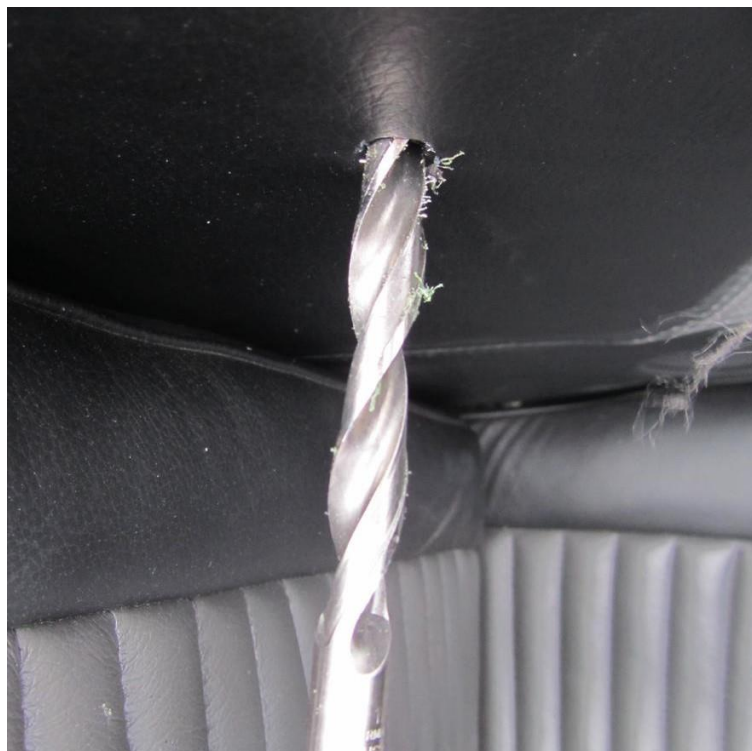

### STEP 3

Push the plug through the hole and fixate the plug with the supplied nut and washer. **Don't tighten the plugs to much** since there are made of plastic the may break if you tighten them with to much force.



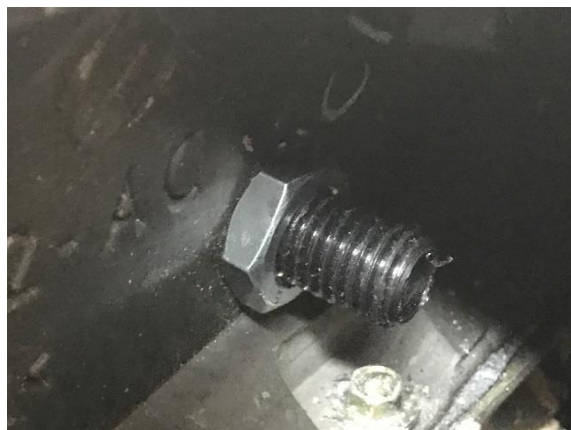

## STEP 4

Click the wind deflectors pins into the installed plugs.







**STEP 5**

Go out for a test drive and enjoy your wind deflector!

