



HARDTOP STORAGE SOLUTIONS

Toyota MR2 ZZw30 Hardtop wall brackets fitting instructions

Product No: WB20




What is in the box

2 x Hardtop brackets

2 x Wall brackets

4 x Wall bolts & plugs

1 x Installation manual

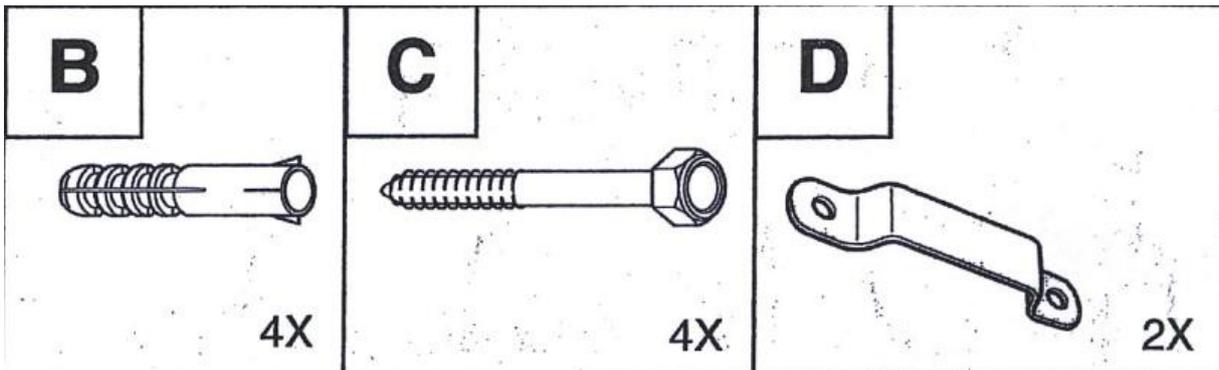



HARDTOP STORAGE SOLUTIONS

STEP 1

Start by attaching the top brackets to the slot on the back of the hardtop.



STEP 2


Now clip in the bottom bracket, using the clips of the hardtop.



HARDTOP STORAGE SOLUTIONS


STEP 3

Install the wall brackets to a solid wall with a **125cm / 49 inches** distance between them.

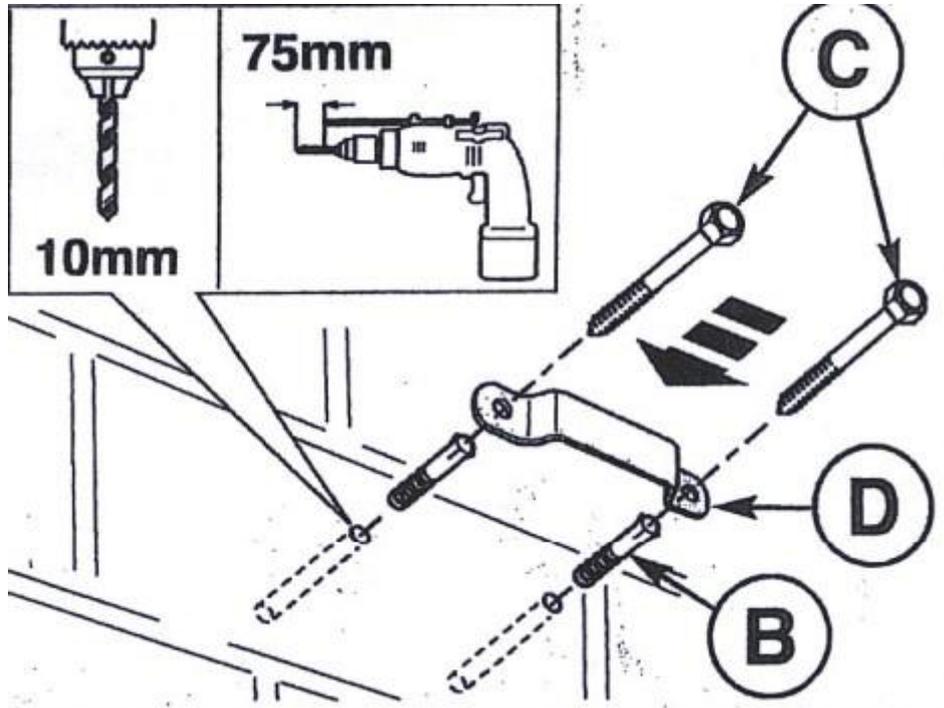

STEP 4

Hang the hardtop with the hardtop brackets on to the wall brackets.

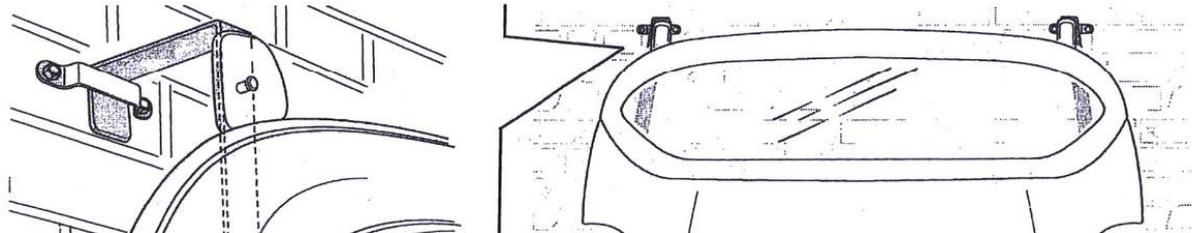

Your hardtop is now safely stored!