



## PREMIUM AFTERMARKET WIND DEFLECTORS

### MG MGB & RV8 1962-1996 wind deflector fitting instructions

Product No: 31.01.02.01



#### What is in the box

- 1 x Wind deflector
- 1 x Installation manual
- 2 x Brackets
- 2 x Bolts 13 mm
- 2 x Plastic caps
- 4 x Washers

#### What tools do you need

- 1 x Wrench 13 mm
- 1 x Phillips screwdriver


We suggest your read these instructions first to give you an idea of the sequence of fitting this draft stop.

#### STEP 1

1. On cars fitted with the "grey stick frame" removable hood frame, we suggest the whole frame and cover are removed. MG has used different types of top frames but these brackets fit all tops frames. We have added pictures of all top frames.

#### STEP 2

On later cars where frame is permanently attached, unclip header rail from front screen and unclip all lift-a-dot fasteners on the rear cockpit valance, then release cover from the two securing brackets on rear of same valance. With the frame in it's "normal" position, flip the rear part of the cover over the top of the frame. This will give you easy access to the mounting brackets (first picture below). You will need to remove the two lower Phillips screws from the hood frame mounting brackets as shown here "A". Suggest you keep the hood upright which will allow you better access to the screws.

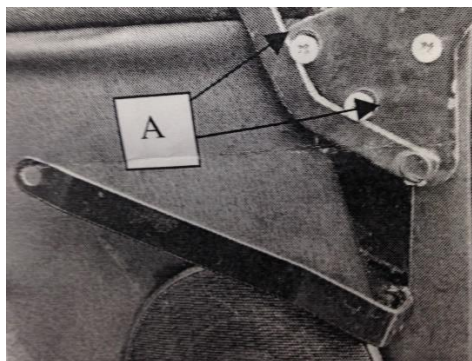



## PREMIUM AFTERMARKET WIND DEFLECTORS



### STEP 3

Having removed these two screws, undo the third top screw but only about three turns of the screwdriver. This will allow you to slide the new brackets under the hood frame and hood roll support roll bracket, whilst keeping the frame attached to the body.



### STEP 4

There is a left and a right bracket. You will see that there is a slotted hole on each bracket. We have done this to allow the bracket to swivel slightly. You may need to swivel the bracket to miss the radio speakers fitted in the rear wheel arch panels. For cars with no speakers, choose a central position in the swivel cut-out. Slide the bracket under the frame, then carefully locate the holes in frame and body and insert the Phillips screws and tighten. If you have speakers fitted, adjust the position of the bracket to clear them.





## PREMIUM AFTERMARKET WIND DEFLECTORS

### STEP 4

Once you are happy with the position of the brackets you can now fit the wind deflector. Please note that we suggest you place the metal washer against the frame, then the bracket, then another metal washer and the bolt. Tighten the bolt so that the wind deflector is upright. You will see on the left hand bracket there is an upright metal piece. This is there to stop the deflector from being pushed forward at very high speeds.

